



## Panic Button System

### Battery replacement requirements

#### DSC Panic Button System



Each **DSC** panic button system ships with long life batteries. Spectrum Fitness Services recommends that you replace your batteries every 3 years.

See below for information on identification and battery information for the devices installed on your **DSC** panic system. Batteries are available at Radio Shack.

	1 Button Emergency Pendant	CR2025 Lithium <i>(2 batteries per transmitter)</i>
	Emergency Station/Button	CR-2 Lithium

#### Linear Panic Button System

See below for information on identification and battery information for the devices installed on your **Linear** panic system. Batteries listed are available at Radio Shack.

	1 Button Emergency Pendant	Batteries are not replaceable. Pendant must be replaced.
	Emergency Station/Button	CR-2032 Lithium