


Install and configure your tailgate detection with your EDR410-810H

Once you have installed and tested your TDS with the access system, it is time to connect it to your EDR digital video recorder and configure it.

1. Connect the alarm status wires (pink w/brown stripe pair) to pins 1 (GND) and 2 (ALM 1) on the EDR alarm board.
2. Plug the EDR alarm board into DVR. The connection is located on the rear of the unit.
3. If your DVR is not powered up, power it on now.
4. Enter the DVR menu by pressing the *menu* button, scroll to the *alarm* menu, and press *enter*.
5. Once you have entered the alarm menu, alarm 1 should already be highlighted. Press *enter* to select it and begin configuring your TDS.

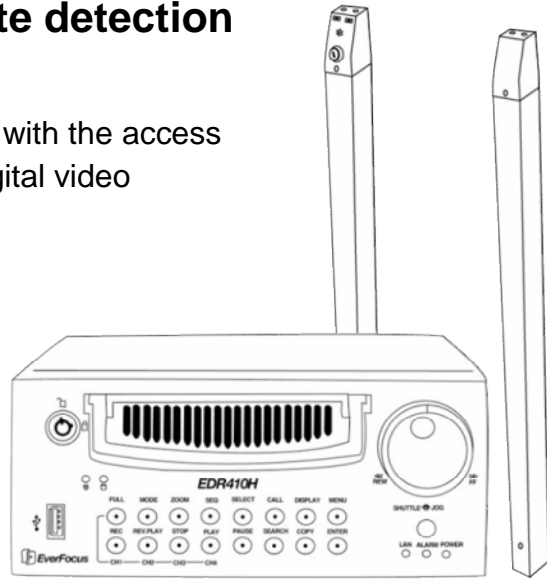

Menu Settings:

6. Once your EDR's alarm settings have been changed to match those listed in the *Menu Settings* table on the right, press the *menu* button to exit the alarm 1 settings section.
7. Next, press *menu* twice to exit the alarm and programming menus.

ALARM	ENABLE
ALARM TYPE	N.O.
LOG	ON
ACTIVE CAMERA	(SELECT CAMERA POINTED AT ENTRY DOOR)
PTZ PRESET	OFF
DURATION	05 SEC
ALARM OUTPUT	NONE
ALARM EMAIL	NO
BUZZER	DISABLE
ALARM NETWORK	NO
MAIN MON	NO CHANGE
CALL MON	NO CHANGE